




INSTALLATION PREPARATION GUIDELINES

1. CHECK MINIMUM PATH OPENING TO SITE

Please ensure there is an entrance clearance of at least 12 feet to allow our installation team access to the property.

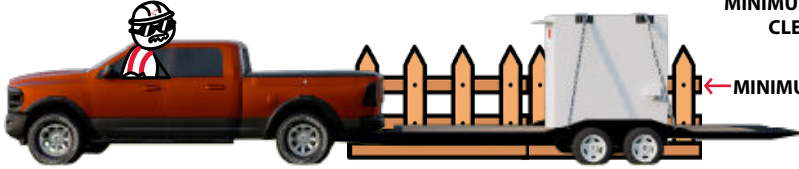


MINIMUM OVERHEAD CLEARANCE
13 FT
MINIMUM OPENING
12 FT



IF THE AREA IS NOT ACCESSIBLE, WE WILL NEED TO BRING HEAVY MACHINERY TO UNLOAD THE SHELTER, WHICH WILL RESULT IN ADDITIONAL FEES OF \$1,500 TO \$3,000.

2. CHECK UNOBSTRUCTED SPACE REQUIRED

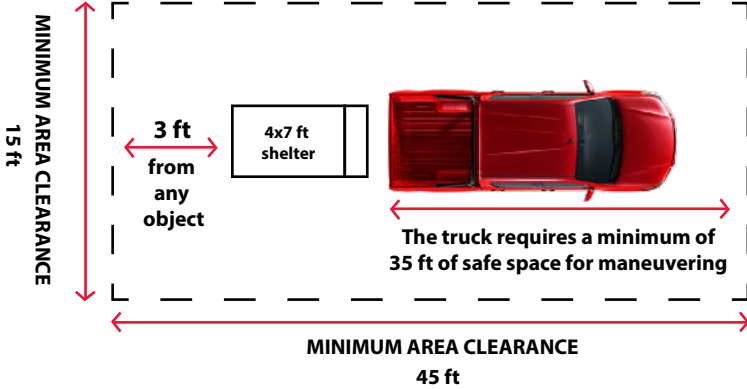

3. CALL 811

Schedule an appointment for utility line marking. It usually takes 2-3 business days for them to visit. **All utility lines must be located and marked before delivery.**



4. CLEAN IT ALL!

Remove all puddles, mud, loose dirt, gravel, ditches, rocks, and any objects that may obstruct the installation area.



THE AREA MUST BE FLAT, DRY AND READY

5. MARK IT!

Once the site is prepared, clearly mark the installation area using chalk, spray paint, tape, or other visible methods.



SEND PHOTOS OF THE MARKED AREA TO TORSHEL.

IF THE INSTALLATION AREA HAS A SLIGHT SLOPE, PLEASE SEND VIDEOS AND PICTURES SO WE CAN ASSESS WHETHER INSTALLATION IS POSSIBLE.



THE TRUCK CANNOT BACK DOWNHILL WHILE LOADED



PRECAST CONCRETE SHELTERS CAN SIT ON FLAT LEVEL GROUND OR GRAVEL, CONCRETE PAD IS NOT REQUIRED. IF YOU PLAN TO POUR A CONCRETE PAD, PLEASE CONTACT US FOR SPECIFICATIONS CALL (601) 500-7275